


# Decal Installation Instructions



1. Clean Surface with window cleaner to remove all dirt, grime, etc.
2. Without removing the paper backing, position the decal in the surface where you want it to be.
3. Once the decal is in position, place masking tape along the top edge to hold the decal in place.




4. The decal should now be sitting in place like a flap. Lift up the decal and remove the backing paper.



5. With the backing paper completely removed from the decal and transfer tape, gently lower the decal with the transfer tape back down to the surface and rub it down lightly with your hand.



6. Take a squeegee or credit card and firmly rub the decal down to the surface. The transfer tape should still be on the decal. This allows you to rub the decal down without scratching or damaging it.

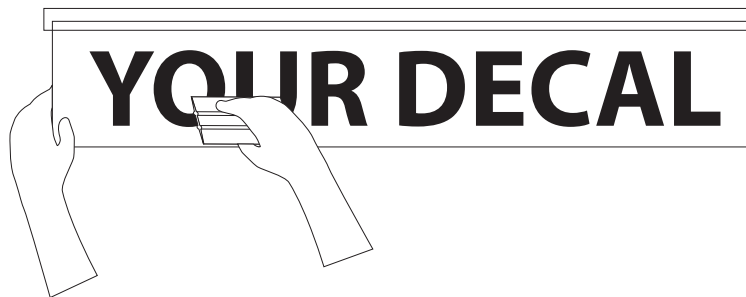

7. Finally, peel off the transfer tape and masking tape gently. The decal will adhere to the surface much more aggressively than the transfer tape. The transfer tape should lift easily, leaving behind no sticky residue.

## YOUR DECAL

8. Your decal installation is now complete. If there are any bubbles present under the decal that cannot be removed, by working them to the edge, a small needle or pin can be used to puncture the bubbles and remove the air. A small pin hole will not be seen after the air bubble has been worked out.